

パルス式集塵機 **Pulse Dust Collector**

取扱説明書 **Instruction Manual**

型式/MODELS CHP-5000AT3-DSA-UD

(200V)



取扱説明書(以下、本書といいます)の『製品使用上のご注意』の内容をよく理解し、本書をよく読んでか ら操作してください。

Please understand well the contents of "Cautions on Product Use" of Instruction Manual (hereinafter referred to as "this manual"), and operate it after often reading this manual.

本書はいつでも使用できるよう、大切に保管してください。 Please keep this manual carefully to be able to use it at any time.

> チコーエアーテック株式会社 CHIKO AIRTEC CO., LTD.

■はじめに/Introduction

このたびは、CHP シリーズをお買い上げ頂き、誠にありがとうございます。

チコーエアーテック株式会社は「風の技術」を有効に利用し、コンパクトに空気をクリーンにすることをテーマとして努力しております。

CHP シリーズは、この風の技術をコンパクトにまとめた省エネ形のクリーン BOX です。

長期間故障なく安全にご使用いただくために、この取扱説明書をよくお読みいただき、本機の性能を十分に発揮できますよう正しいお取扱いをお願いします。

We greatly appreciate that you have purchased our CHP Series.

CHIKO AIRTEC CO., LTD. is working to achieve clean air with compact equipment while utilizing "air technology" effectively.

The CHP Series is an energy-saving-type clean box that realizes "air technology" in a compact body. Please read this instruction manual thoroughly and handle this CHP Series machine correctly so that you can use it safely for a long time and enjoy its full performance.

■本文中の表記について/About Notation

本書では、以下の表記に従って説明しています。

This manual explains according to the following notations.

表記/Notation	意味/Description
重 要 IMPORTANT	本機の機能を十分に発揮するための情報や、本機の損傷を防ぐための情報を記載して います。 The information for fully exhibiting the function of this machine and the information for preventing damage to this machine are indicated.
メ モ NOTE	参考となる情報を記載しています。 The information which is consulted is indicated.
1. 2. 3. ···	操作手順を記載しています。 The operating procedure is indicated.
<u></u>	参照先を記載しています。 The reference destination is indicated.

■転載・複写について/Copyrights

- 本書の著作権は、チコーエアーテック株式会社が所有しています。 CHIKO AIRTEC CO., LTD. owns the copyright of this manual.
- 本書の内容の一部あるいは全部の無断転載や複写は固くお断りします。
 Unauthorized reproduction or copying of part or all of the content of this manual is strictly prohibited.
- 本書の内容は、将来予告なく変更することがあります。
 The contents of this manual are to change without notice.

© 2017 CHIKO AIRTEC CO., LTD.

目 次

第1章 製品使用上のご注意	3
11 安全に関する表記	3
1.2 運搬・保管・輸送時のご注意	
1.3 設置時のご注意	
1.4 運転時のご注意	
1.5 その他のご注意	
1.6 危険シールの貼付位置	5
第2音 久邨の夕珠	6
- 第2早 谷中の石材	0
2.1 付属品	6
2.2 装置本体	7
2.2.1 CHP-5000AT3-DSA-UD	7
2.3 AI3 ハネル	8
2.4 ティスフレイ表示	9
2.4.1 モートについて	
2.4.2 停止中の衣示	
2.4.5 連転中の表示	10
第3章 運転	11
3.1 運転前の準備	11
3.1.1 設置	11
3.1.2 配線·配管	13
3.1.3 保護機能	14
3.2 運転	15
3.3 初期圧登録	
第4章 各種設定(モードセレクトモード)	16
第4章 各種設定(モードセレクトモード)	16 16
 第4章 各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 	16
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 	16 16 16 17
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 	16
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 	16 16 16 17 17 18
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移	16 16161717171818
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 	16 16 16 17 17 17 18 18 18 19
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移	16 16 16 17 17 17 18 18 19 19
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移	16 16161717171818191919
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移. 4.2 通信フォーマット設定モード(通信機能装備時)	16 16161717171818191919
 第4章各種設定(モードセレクトモード)	
 第4章各種設定(モードセレクトモード)	
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 5 章保守・点検 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタのメンテナンス(全部一緒に引き上げる場合) 	
 第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタのメンテナンス(全部一緒に引き上げる場合) 5.1.4 ダストトレイの清掃 	
 第4章各種設定(モードセレクトモード)	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.4 ダストトレイの清掃 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.4 ダストトレイの清掃 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換 5.3 日常点検	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 第5章保守・点検 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.4 ダストトレイの清掃 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換 5.3 日常点検 5.3 1 パルスタイマーについて	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4.1 時刻合わせモード 4.4.2 積算稼働時間リセットモード 4.4.3 設定値リセットモード 4.4.3 設定値リセットモード 4.5 エラー履歴モード 4.5 エラー履歴モード 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタの交換・メンテナンス(全部一緒に引き上げる場合) 5.1.4 ダストトレイの清掃 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換 5.3 日常点検 5.3.1 パルスタイマーについて 5.4 エラー・警告	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 夏算稼働時間リセットモード 4.3 設定値リセットモード 4.4 3 設定値リセットモード 4.5 エラー履歴モード 4.5 エラー履歴モード 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合) 5.1.3 1次フィルタの交換 5.1.4 ダストトレイの清掃 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換 5.3 日常点検 5.3 日常点検 5.3.1 パルスタイマーについて 5.4 エラー・警告 5.4.1 エラー・警告の処置方法	
第4章各種設定(モードセレクトモード) 4.1 モードセレクトモードでの画面遷移 4.2 通信フォーマット設定モード(通信機能装備時) 4.3 風量不足お知らせタイミング設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 その他の設定モード 4.4 この他の設定モード 4.5 エラー履歴モード 4.5 エラーへ感告 5.1 フィルタのメンテナンス・交換 5.1.1 1次フィルタの交換・メンテナンス(全部一緒に引き上げる場合) 5.1.5 ブロア冷却フィルタの交換 5.2 ボタン電池の交換 5.3 日常点検 5.4 エラー・警告 5.4.1 エラー・警告の処置方法 5.4.2 エラー・警告	16 16 16 17 17 17 17 18 18 19 19 20 20 20 20 20 20 22 22 22 22 22 23 24 24 22 22 22 23 24 24 25 26 26 26 27

第6章 便利な使い方(オプション)	
6.1.1 電気回路図	
6.1.2 ピンアサイン	
6.1.3 リモート操作	
6.2 通信機能	
6.2.1 RS485 通信	
6.2.2 イーサネット	
第7章 付録	
7.1 仕様	
7.2 消耗品リスト	
7.3 電気回路図	
7.3.1 CHP-5000AT3-DSA-UD	

第1章 製品使用上のご注意

1.1 安全に関する表記

この取扱説明書には、使用時の注意事項が下記の記号とともに記載されています。

必ずお読みください。

記号	意味
▲ 警告	正しく使用しない場合、取扱者が死亡または重傷を負う危険性がある注意事項が記載され ています。
⚠ 注意	正しく使用しない場合、取扱者が傷害を負う危険性や本装置を損傷する恐れがある注意事項が記載されています。
\otimes	行ってはいけない「禁止」の内容です。
	必ず実行する「強制」の内容です。

1.2 運搬・保管・輸送時のご注意



1.3 設置時のご注意

▲ 警告	\oslash	 引火性・爆発性・腐食物質の霧・煙・ガスが滞留している場所や、これらの付近に設置しないでください。 		
		 本機は、屋内クリーンルーム内または清浄度の高い工場に設置することを前提と 		
		した構造となっていますので、屋外などには設置しないでください。		
	0	 狭い吸引口で使用しないでください。 吸引口が狭い(圧力が高い)状態で使用し続けるとモータが冷却出来ず高温になる恐れがあります。 		
		 回転機器が内蔵されていますので、水平で振動のない場所に設置してください。 		
⚠ 注 意		 常温(周囲温度 0~40℃/湿度 80%以下)で、結露しない場所に設置してください。 高温・結露は、電気部品の故障、感電の原因になります。 		
		 吸引雰囲気温度(集塵対象の粉塵をとりまく周囲の温度)が高いとモータ能力の 低下・故障の原因になりますので十分考慮してください。 		
		 ・ 排気口は十分なスペース(排気口より 100 mm以上)を設けてください。 排気口を塞ぐと正規の吸引力が発揮できません。また、ボックス内部で十分な冷 却が行われないため、モータ焼けや電気部品の故障原因となります。 		
		• 海抜 1,000m以下の標高に設置してください。		

1.4 運転時のご注意

▲ 警告	Ø	 次の物質は吸引しないでください。 引火性物質 ガソリン・シンナー・ベンジン・灯油・塗料など。 爆発性粉塵 アルミニウム・マグネシウム・チタン・亜鉛・エポキシなど 火花を含んだ粉塵 高速切断機・グラインダー・溶接機などから発生する火 花を含んだ粉塵。 火種 たばこ・油・薬品などの液体 その他
		 粉塵爆発のおそれのない乾いた粉塵の吸引に使用してください。 アース線は必ず接続して使用してください。

	\Diamond	• 運転中は移動させないでください。
⚠ 注 意	0	 汚染度1の場所で使用してください。 過電圧カテゴリーが区分Ⅱの電源で使用してください。 停電時は、主電源スイッチをOFFにしてください。 停電復旧時に、けが・装置破損の原因になります。 フィルタは正しく取り付けて使用してください。 フィルタが取り付けられていなかったり、目詰まりや破損した状態で運転すると、 モータ内へ異物が混入し、故障の原因となります。

1.5 その他のご注意



1.6 危険シールの貼付位置







分解禁止シール



lectric plaque	
Model number	***_**** ****
Air pressure	***-**** MPa
Short-circuit rating of the equipment	***A
Drawing number	***_******_**_**

1

2			
	сніко		Ver.***
	MODEL	***_**** ******	
	SERIAL NUMBER	****_**	
	CHIKO AIRTEC		MADE IN JAPAN

2-27-24 Hakushima minoh city Osaka Japna 562-0017

³ <u>сн</u> і	ко			Dust Collector
	***	-***	-**-***	
定格電圧	* *	* V	定格周波数	* / * Hz
定格電流	*.	* A	質量	* * . * kg
製	製造番号)**-**-*	* * *
	CHIKO AIRTI	EC CO., LTI	D MADE IN J	APAN

2-27-24 Hakushima, Minoh City Osaka Japan 562-0012

第2章 各部の名称

2.1 付属品



番号	名称	働き	数量
1	1 次フィルタ	粉塵やヒュームを収集・吸着します。	1
2	バルブブースター	1次フィルタ内のパルスエアーを整流させます。	1
3	ゼオライト	フィルタ表面に積層させ、フィルタ表面へのヒュームの付着を 軽減させます。	
4	ブロア冷却用排気フィルタ	排気をクリーンにします。	1
5	フィルタレギュレータ	圧縮空気の圧力を調整します。(設定値:0.45~0.55MPa)	1
6	昇降用工具	本体をジャッキアップ・ダウンさせるための工具	1
\bigcirc	スタートアップガイド	集塵機の電源を入れて、使用する際に確認します。	1

電源ケーブルは、付属しておりません。

推奨ケーブル:AWG12以上 耐圧 300V以上

2.2 装置本体

2.2.1 CHP-5000AT3-DSA-UD



番号	名称	働き
1	排気口	排気ダクトを接続します。
2	AT3 パネル(操作パネル)	本機を操作します。
3	電池ボックス	ボタン電池を収納しています。
4	リモートコネクタ	リモートケーブル(別売)を接続します。
5	パルス室	パルス装置を収納しています。
6	点検窓	内部の状況を確認するための点検用窓です。
\bigcirc	ダストトレイ	集積した粉塵・ゼオライトを収納します。
8	ブロア冷却フィルタ室	ブロア冷却用フィルタを収納しています。
9	モータ室	モータを収納しています。
10	リリーフバルブ	内部の圧力を逃がします。
1	フィルタレギュレータ	チリ落とし用圧縮空気の圧力を調整します。 (設定値:0.45~0.55MPa)
(12)	吸込み口	吸気ダクトを接続します。
(13)	1 次フィルタ室	1次フィルタを収納しています。
14	電源端子台 BOX	電源端子台を収納しています。

2.3 AT3 パネル



番号	名称	働き
1	有機 EL(OLED) ディスプレイ	運転状態や各種設定内容を表示します。 エラー・警告発生時は、エラー・警告 No.を表示します。
2	能カレベルランプ	能カレベルを緑色のランプで表示します。(レベル 1~7)
3	↑/↓ボタン	停止中、運転中は、ディスプレイの表示内容を切り替えます。 <i>⊂雺「2.4 ディスプレイ表示」(9 ページ)</i> モードセレクトモード時は、設定項目の切り替えと設定する数値データを変更 します。 <i>⊂雺「第4章 各種設定(モードセレクトモード)」(16 ページ)</i>
4	異常ランプ	運転を停止するエラーが発生したときは、赤色ランプが点灯し、 運転を継続するエラー・警告が発生したときは、赤色ランプが点滅します。
5	←/→ボタン	運転中は←(→)ボタンを1回押すごとに能力が1レベル降下(上昇)します。 モードセレクトモード時は、←(→)ボタンを1回押すごとにカーソルが1つ左 (右)に移動します。
6	OFF ボタン	運転を停止します。 停止中に3秒間長押しすると、登録した初期圧をクリアします。 <i>⊂雺「</i> 3.3 初期圧登録」(15ページ)
\bigcirc	ON ボタン	運転を開始します。
8	ENTER ボタン	運転中は、3秒間長押しすると初期圧登録に移行します。 <i>ごす「3.3 初期圧登録」(15ページ)</i> モードセレクトモード時は、設定項目の選択と数値データを決定します。 <i>ごす「第4章 各種設定(モードセレクトモード)」(16ページ)</i>
9	MODE SELECT ボタン	停止中は、モードセレクトモードに移行します。 <i>⊂す「第4章 各種設定(モードセレクトモード)」(16ページ)</i> モードセレクトモード時は、一つ前に戻ります。 エラー・警告発生時は、エラー履歴モード、エラークリアモードに移行します。

2.4.1 モードについて



2.4.2 停止中の表示

↑/↓ボタンで表示を切り替えることができます。



第2章 各部の名称

2.4.3 運転中の表示

↑/↓ボタンで表示を切り替えることができます。



日本語

第3章 運転

3.1 運転前の準備

3.1.1 設置

■ 設置方法



■ 設置場所

<u> 注</u> 意

使用上安全および本機の性能を十分に発揮させるため、下記の条件を満たす場所に設置してください。

項目	内容
周囲温度	0°C~+40°Cの範囲
周囲湿度	80%RH 以下の範囲(結露のないこと)
雰 囲 気	屋内(直射日光が当たらないこと)、腐食性ガス・引火性ガス・オイルミスト・粉塵のないこと

■ボタン電池絶縁シートの取り外し

ボタン電池の絶縁シートを取り外す際には、通電状態で行ってください。

- 本機を使用する前にボタン電池の絶縁シートを取り 外してください。
- 2. 電池カバー部から絶縁シートを引き抜きます。





↓ 本体を通電せず絶縁シートを引き抜くと、著しく電池が消耗することがあります。

第3章 運転

	 ボタン電池は電源が OFF のときに消費されます。
メモ	• 電源 ON 時(1µA 以下)、電源 OFF 時(40~50µA)
	 電池寿命(参考値:約2年)は、使用状況によって変わります。目安としてください。

■ フィルタレギュレータの取り付け

フィルタレギュレータ設置箇所に取り付けます。





レギュレータ内に合成油・有機化合物・化学薬品・切削油及びそのミスト等を付着させないでください。

日本語

3.1.2 配線 配管

■ 配線



本機の電源は、三相電源です。 供給電圧の許容範囲は、±10%です。

1. 電源端子台 BOX のネジを取り外し フタを外します。



2. 電源ケーブルを本機の電源端子台に接続します。



3. 電源ケーブルの電源側を電源に接続します。

■ 配管

1. 吸気配管(別途ご準備)を吸込みロフランジに 接続します。



3.1.3 保護機能



フィルタが目詰まりしたまま運転を続けると下記の様な保護機能が働きます。保護機 能が働いた時点でブロア等にダメージが及ぶ可能性があります。 直ちにフィルタ及び各部の点検を行ってください。

■SP(吸込圧)上昇

フィルタ目詰まり等により、16.5kPa 付近に達すると、リリーフバルブが作動します。 また、19kPa 付近で電流値は 26.5A に達し、この状態が 10 秒以上続くと強制停止します。

■温度上昇

モータ温度が 80℃を超えると、ディスプレイに WARN1 が表示されます。 さらに、90℃に達すると ERR04 が表示され、強制停止します。

3.2 運転

- 電源を ON にします。
 ディスプレイにプログラムバージョンと
 RS485 通信用の ID 番号が表示されます。
- 2. AT3 パネルの ON ボタンを押します。 装置の運転が開始されます。
- **3.** 異常音がないことと、適切な吸引であることを確認します。
- ← / →ボタンで吸引レベルを設定します。
 能カレベルランプ(1~7)で吸引能力が表示
 されます。



重要

適切な配管で運転してください。
 配管はできるだけ短くし、配管口径は狭くしすぎないでください。

3.3 初期圧登録

初期登録した差圧からフィルタ目詰まりによる風量低下を判定し、風量不足(WARN4)としてお知らせします。 次の手順で、初期圧力を登録してください。

- 1. 本機を配線、配管します。
- 2. 任意の能力で運転を開始します。
- ENTER ボタンを3秒間長押しします。 ディスプレイに"Initial DP Get Y"と表示され、初期圧力の更新登録を実施するか確認されます。
- 4. 更新登録を実施する場合は ENTER ボタンを押します。 初期圧力の取得動作を開始します。 実施しない場合は、MODE SELECT ボタンを押すと通常動作に戻ります。
- 5. 能力レベル1から7まで順番に運転し、各能力レベルの差圧を自動取得します。 初期圧力の取得動作中は、ディスプレイに"Initial DP Check"と「能力レベルと差圧」が交互に表示されま す。
- 6. 登録が完了すると、ディスプレイに"Initial DP Entry"と表示されて通常動作に戻ります。

■ 初期圧登録クリア

- 停止中に OFF ボタンを 3 秒間長押しします。 ディスプレイに"Initial DP Clr Y"と表示され、登録した初期圧をクリアするか確認されます。
- クリアする場合は ENTER ボタンを押します。
 クリアしない場合は、MODE SELECT ボタンを押すと通常動作に戻ります。
- 3. クリアが完了すると、ディスプレイに"Initial DP Clr"と表示されて通常の停止状態に戻ります。

第4章 各種設定(モードセレクトモード)

4.1 モードセレクトモードでの画面遷移

停止中に MODE SELECT ボタンを押すとモードセレクトモードに移行します。 ↑ / ↓ボタンで設定項目を切り替えます。



4.2 通信フォーマット設定モード(通信機能装備時)

シリアル通信フォーマットの以下の項目を設定します。 設定した内容は電源 OFF→ON での再起動後に有効になります。

項目	設定内容	標準出荷設定値
通信局番	1~25	1
ボーレート	9600bps、19200bps、 38400bps、57600bps、 115200bps	9600bps
ビット長とパリティ	ビット長 8bit パリティなし ビット長 8bit パリティ奇数 ビット長 8bit パリティ偶数 ビット長 9bit パリティなし	ビット長 8bit パリティなし
ストップビット	ストップビット 1 ビット ストップビット 2 ビット	ストップビット 1 ビット

1. モードセレクトモードに移行します。

- 2. ↑ / ↓ボタンを押して通信フォーマット設定モード("Com Setting")に移行します。
- ENTER ボタンを押します。
 通信局番の確認画面になり、現在の設定内容が表示されます。
- 4. ↑ / ↓ボタンを押して設定する項目に移行します。

- **5.** ENTER ボタンを押します。 設定画面が表示されます。
- 6. ↑ / ↓ボタンを押して設定内容を選択します。
- 7. ENTER ボタンを押して設定内容を決定します。
- 8. 終了する場合は MODE SELECT ボタンを押して通常モードに戻ります。

4.3 風量不足お知らせタイミング設定モード

風量不足警告(WARN4)を表示させるタイミングを任意で変更できます。

- 1. モードセレクトモードに移行します。
- 2. ↑ / ↓ボタンを押して風量不足お知らせタイミング設定モード("Volume Down ST")に移行します。
- ENTER ボタンを押します。
 現在の設定内容が表示されます。
 標準出荷設定値は 50%で、"3:Down to 50%"が表示されます。
- 4. ↑ / ↓ボタンを押して 30%~70%の間で選択します。
 設定値を下げると風量不足お知らせのタイミングが遅くなり、設定値を上げると早くなります。



- 5. ENTER ボタンを押して設定内容を決定します。
- 6. 終了する場合は MODE SELECT ボタンを押して通常モードに戻ります。

4.4 その他の設定モード

以下の項目を設定します。

- 日付と時刻の設定

 ☆ 「4.4.1 時刻合わせモード」(18 ページ)
- 積算稼働時間のリセット
 ご家「4.4.2 積算稼働時間リセットモード」(18 ページ)
- 設定データのリセット
 ご家「4.4.3 設定値リセットモード」(19 ページ)

第4章 各種設定(モードセレクトモード)

4.4.1 時刻合わせモード

日付と時刻を設定します。

- 1. モードセレクトモードに移行します。
- 2. ↑ / ↓ボタンを押してその他の設定モード("Other Setting")に移行します。
- ENTER ボタンを押します。
 "Time Adjust"が表示されます。
- **4.** ENTER ボタンを押します。 日付の設定画面になります。
- 5. ↑ / ↓ボタンを押して数値を変更します。
- **6.** ENTER ボタンを押して数値を決定します。 年、月、日の順に設定します。
- 7. 日付が設定されると、時刻の設定画面になります。
- 8. ↑ / ↓ボタンを押して数値を変更します。
- **9.** ENTER ボタンを押して数値を決定します。 時、分、秒の順に設定します。
- 10. 終了する場合は、MODE SELECT ボタンを押して通常モードに戻ります。

4.4.2 積算稼働時間リセットモード

積算稼働時間(Runtime)をリセットします。

- 1. モードセレクトモードに移行します。
- 2. ↑ / ↓ボタンを押してその他の設定モード("Other Setting")に移行します。
- ENTER ボタンを押します。
 "Time Adjust"が表示されます。
- 4. ↑ / ↓ボタンを押して、表示を"[Runtime Reset]"にします。
- ENTER ボタンを押します。
 "Reset Runtime Y"と表示され、積算稼働時間をリセットするか確認されます。
 リセットする場合は ENTER ボタンを押してください。
- 6. 終了する場合は、MODE SELECT ボタンを押して通常モードに戻ります。

4.4.3 設定値リセットモード

通信フォーマットと風量不足お知らせタイミングを標準出荷設定値に戻し、積算稼働時間をリセットします。

- 1. モードセレクトモードに移行します。
- 2. ↑ / ↓ボタンを押してその他の設定モード("Other Setting")に移行します。
- ENTER ボタンを押します。
 "Time Adjust"が表示されます。
- 4. ↑ / ↓ボタンを押して、表示を"[Setting Reset]"にします。
- ENTER ボタンを押します。
 "1:YES"と表示され、設定値をリセットするか確認されます。
 リセットする場合は ENTER ボタンを押してください。
- 6. 再確認のため、"1:START"と表示されます。
- 7. ENTER ボタンを押すと設定値がリセットされ、通常モードに移行します。

4.5 エラー履歴モード

4件分のエラー履歴を確認することができます。 エラー履歴は電源を OFF するとクリアされます。

- 1. モードセレクトモードに移行します。
- 2. ↑ / ↓ボタンを押してエラー履歴モード("Error Data")に移行します。
- ENTER ボタンを押します。
 直近で発生したエラーNo と発生したときの積算稼働時間が表示されます。
- 4. ↓ボタンを押すと、新しい順に4件分のエラー履歴が表示されます。
- 5. 終了する場合は、MODE SELECT ボタンを押して通常モードに戻ります。

第5章 保守·点検



5.1 フィルタのメンテナンス・交換

目詰まりした場合、「WARN2」の警告が表示されますので、1次フィルタを交換してください。

介 注 意 ↓ パッキン部に付いたゴミは、ウエス等で綺麗に拭取り、清掃して下さい。 吸引力低下、粉塵漏れ等といった、トラブルの原因になります。

5.1.1 1次フィルタのメンテナンス・交換

要 • 1 次フィルタの交換は、十分なスペースがある場所で行ってください。

1. 2本のチューブとパッチン錠2個を取り外します。(パッチン錠は反対側にもあります。)



2. レンチを取り付け、ブロワー室を上昇させます。



重

3. ブロア室を 30mm 以上上昇させてください。



5. 1次フィルタ室を手前に引き出します。





洗浄後及び交換後のフィルタを取り付けの際、締め付けが均一でない場合や締め付けが緩い場合は、ゼオライトが漏れる可能性があります。 又、年次劣化により1次フィルタに取り付けてあるパッキンが潰れている場合は、交換となります。(消耗品販売となります)

5.1.2 1次フィルタの交換・メンテナンス(1本づつ引き上げる場合)

1. 12本のナットを緩めて取り外し、取っ手を 持って押え板を外します。

2. バルブブースターを外し、清掃又は交換し てください。



第5章 保守·点検

5.1.3 1次フィルタのメンテナンス(全部一緒に引き上げる場合)

- 一次フィルタ室を引き出します。
 フィルタ取り付け板の取っ手を持ちあげる
 と、一式を取り外すことができます。



2. パッキン上部、フィルタ取り付け板のパッキン当たり面を清掃してください。

5.1.4 ダストトレイの清掃

重要

ダストトレイに埃をためないでください。1次フィルタの目詰まりの原因になります。 使用後は、ダストトレイの埃を廃棄してください。

ダストトレイの2個のパッチン錠のみを外します。
 (パッチン錠は反対側にもあります。)

- **2.** ジャッキを取り付け、30mm 以上上昇させます。
- 3. ダストトレイを引出し、清掃します。



5.1.5 ブロア冷却フィルタの交換



フィルタの取り付け時は、裏・表を間違えないでください。 フィルタ格子の枠が排気側です。

重要排気フィルタの交換は、十分なスペースがある場所で行ってください。

1

1. アイボルト4カ所とパチン錠4カ所を外します。



- 2. フタを取り外します。
- **3.** 4 カ所ネジを緩めて裏面の押え枠を外します。
- 4. フィルタを交換します。







第5章 保守·点検

5.2 ボタン電池の交換



- 1. 本体を通電して下さい。
- 2. 電池カバーのネジ(2個)を外し、電池カバ ーを取り外します。



- 3. 爪を右に押し、ボタン電池を取り外します。
- 4. 新しいボタン電池に交換します。
- 5. 電池カバーを元通りに取付けます。
- 6. 本体の電源を遮断して下さい。



5.3 日常点検

点検項目	頻度	点検内容
フィルタケース	運転前	完全に閉じているか
吸込口	運転前	吸込口が閉ざされていないか
排気の状態	1回/1日	排気口が閉ざされていないか
操作パネルの状態	1回/1日	エラーや警告が表示されていないか

5.3.1 パルスタイマーについて

本製品は電磁弁を4個搭載しております。

フィルタのゼオライト吸着補助と吸引力の低下を防ぐ為、設定周期にてパルスエアー(圧縮空気)を使用し払落 します。

■パルスタイマー順序動作



5.4 エラー・警告

本機には、エラー・警告が発生すると異常ランプを点灯(点滅)させ、ディスプレイに表示データとエラーNo.を交互に表示する自己診断機能があります。

表示されるエラー・警告の内容についてはごう「5.4.2 エラー・警告一覧」(27 ページ)を参照してください。 自己診断されない故障等については、ごう「5.5 故障と思ったら」(28 ページ)を参照してください。

5.4.1 エラー・警告の処置方法

本機の自己診断機能によりエラー・警告が発生した場合は、以下の操作を行いエラー・警告を解除してください。 説明用の画面は例として記載しています。

- エラー・警告が発生すると、異常ランプが点灯 (点滅)しディスプレイに表示データとエラーNo. が交互に表示されます。 複数のエラー・警告が発生しているときは、優 先順位の高いものが表示されます。
- MODE SELECT ボタンを押し、エラー履歴モ ードに移行します。 複数のエラー・警告が発生しているときは、エ ラーNo.の左側に件数が表示されます。
- 複数のエラー・警告が発生しているときは、
 ↑/↓ボタンを押して、エラーNo.を確認します。
- ディスプレイに表示されているエラーNo.に対応した処置を行います。
 ごす /5.4.2 エラー・警告一覧」(27 ページ)
- 5. MODE SELECT ボタンを押し、エラークリアモ ードに移行します。



エラー・警告を解除する場合は、ENTER ボタンを押して通常モードに戻ります。
 エラー・警告を解除しない場合は、MODE SELECT ボタンを押して通常モードに戻ります。

エラー・警告を解除しなかった場合

- ・運転を継続するエラー・警告の場合……全てのボタンが有効です。
- ・運転を停止するエラー・警告の場合…… ON ボタンが無効になります。

運転を再開するには、エラー・警告を解除してください。

重 亜	亜	● WARN6とWARN7は一度警告を解除すると、次に電源を入れ直すまで			
¥ ¥	ç.	警告表示を行いません。			

5.4.2 エラー・警告一覧

優先 順位	エラー No.	エラー・警告名	内容	異常 ランプ	本機の 動作	方法
	ERR02	INV エラー検知	インバータからの異常 信号を検知	点灯	停止	「5.5 故障と思ったら」の② の対策方法に従って処置を 行ってください。 (<i>ご</i> 家 28 ページ)
高	ERR04	内部温度異常	ブロア周辺温度が異 常に高い	点灯	停止	「5.5 故障と思ったら」の② の対策方法に従って処置を 行ってください。 (<i>ご</i> 字 28 ページ)
	ERR06	圧力異常	圧力不足状態で一定 時間以上運転継続	点灯	停止	「5.5 故障と思ったら」の② の対策方法に従って処置を 行ってください。 (<i>ご</i> 字 28 ページ)
	ERR07	F-RAM 書き込 み異常	F-RAM に書き込みで きない	点滅	運転 継続	当社にお問い合わせくださ い。
	ERR08	通信異常	BCC 判定が不一致	点滅	運転 継続	当社にお問い合わせくださ い。
	WARN1 内部温	内部温度上昇	ブロア周辺温度が異 常判定閾値に近い	点滅	運転 継続	「5.5 故障と思ったら」の② の対策方法に従って処置を 行ってください。 (<i>ご</i> 家 28 ページ)
	WARN2	フィルタ交換時 期超過	風量低下状態で一定 時間以上運転継続	点滅	運転 継続	「5.5 故障と思ったら」の③ の対策方法に従って処置を 行ってください。 (<i>⊂</i> 字 28 ページ)
	WARN3 足力(足	圧力(吸込)不 足	吸込圧が低い	点滅	運転 継続	「5.5 故障と思ったら」の② の対策方法に従って処置を 行ってください。 (<i>亡</i> 家 28 ページ)
	WARN4	風量不足	フィルタ目詰まりによ る風量低下	点滅	運転 継続	「5.5 故障と思ったら」の③ の対策方法に従って処置を 行ってください。 (<i>ご</i> 字 28 ページ)
↓ ↓ 低	WARN5 排気圧力異常 排気圧が異常に高い た		点滅	運転 継続	「5.5 故障と思ったら」の③ または④の対策方法に従っ て処置を行ってください。 (<i>に</i> 字 28 ページ)	
	WARN6	初期圧力未登 録	初期差圧が未登録	点滅	運転 継続	初期圧登録を行ってくださ い。(ビア 15 ページ)
	WARN7	電池電圧低下	電池残量が少ない	点滅	運転継続	ボタン電池を交換してくださ い。(<i>二字24 ページ</i>)

日本語

5.5 故障と思ったら

番号	故障現象	原因	対策方法
1	有機 EL ディスプレイが 表示しない	電源が ON になってい ない	電源を ON にする。
		モータ故障を起こして いる	修理を依頼してください。 モータ交換になります。
		過負荷・異堂温度によ	 [1] 排気ロ/吸引口が塞がれていないか確認する。 [2] 定格電圧を確認する。 [3] フィルタの目詰まりや吸込み温度によりモータが過熱していないか確認する。
2	モータが起動しない または、 運転中に突然停止した	り、停止した	[1]~[3]の確認後、処置を行い 電源を入れ直しします。 運転が再開できない場合は、モータの温度サ ーモスタッドが働いている可能性がありますの で、主電源を切り、30分経過してから、運転を 開始してください。
		1 次フィルタが取り付け られていない	1 次フィルタを正しく取り付ける。
		1次フィルタ室またはダ ストトレイのパッチン錠 が外れている	1次フィルタ室とダストトレイのパッチン錠を確 実に取り付ける。
3	吸引力の低下	フィルタの目詰まり	フィルタを交換する。 <i>ご</i> 「5.1 フィルタのメンテナンス・交換」(20 ページ) 目詰まりを放置すると「粒子の吹きもれ」や 「集塵機内部の温度上昇」の原因となります。
		配管・吸込口の詰り	配管の詰りや吸込口が塞がれていないか確 認する。
		モータ故障を起こしている	修理を依頼してください。 モータ交換になります。
		フィルタの取り付け不良	フィルタを取り付け直す。 <i>亡</i> 了「5.1 フィルタのメンテナンス・交換」(20 ページ)
4	粒子の吹きもれ	フィルタの破損、寿命	フィルタを交換する。 <i>亡</i> 字「5.1 フィルタのメンテナンス・交換」(20 ページ)
		フィルタの目詰まり	フィルタを交換する。 <i>ご</i> 家「5.1 フィルタのメンテナンス・交換」(20 ページ)
5	モータの異常音、異常	ブロア内への異物混入	修理を依頼してください。
9	振動	モータの軸受けが破損	修理を依頼してください。

※上記以外は当社にお問い合わせください。

第6章 便利な使い方(オプション)

日本語

6.1 リモートケーブル

6.1.1 電気回路図



■リモート運転

④ピン......ON になると、リモートモードに移行します。

遠隔操作が可能になり、AT3 パネルでの通常操作は出来なくなります。

②ピン………… 圧力アナログ信号を出力します。

③、⑤、⑥ピン....インダクタ(リレー等)を付加する場合は、ノイズリミッタ(約 33Ω+0.1µF)またはダイオード等 を取り付けてください。







6.1.2 ピンアサイン

線色	ピン 番号	信 号 名称	内容				
黒	1	運転入力信号*1		④と⑧を短絡後、①を短絡して運転を開始します。			
赤/白	4	遠隔操作切替信号* ¹	遠隔信号	④と⑧を短絡してリモート操作に移行させます。 短絡するとタッチパネルの通常操作はできなくなり ます。			
黄	$\overline{\mathcal{O}}$	能力レベル変更*2		⑦と⑧の間で、0~5Vの電圧を印加することで能力 レベルを変更することができます。			
黄/白	8	GND		—			
黒/白	2	運転圧力信号		現在の運転圧力を出力します。 アナログ信号 : 1~5V、インピーダンス : ≧4.7kΩ			
赤	3	フィルタ目詰出力信号*3	ᆹᆂᇉᆋ	目詰まり信号を出力します。 オープンコレクタ出力:NPN			
緑	5	運転出力信号*3	山刀信方	運転信号(ON ランプ)を出力します。 オープンコレクタ出力:NPN			
緑/白	6	異常信号		異常信号を出力します。 オープンコレクタ出力:NPN			

【目詰まり信号】 : WARN2, WARN4, WARN5 の場合

【異常信号】 : 全ての ERR の場合

- *1: 接点入力(無電圧接点)
- *2: アナログ入力(0~5V)

+5.0V 以上印加させないでください。 ⑦ピンの印加電圧閾値表



誤差が±4%あるため、電圧を設定する場合は、各レベルの中点の電圧を印加してください。

*3: オープンコレクタ出力 絶対最大定格は、電圧:50V、電流:100mA です。 **推奨値は、定格の 1/2 以下です。** 第6章 便利な使い方(オプション)

6.1.3 リモート操作

- リモート操作で ON/OFF する場合は、④ピンと⑧ピンを短絡させておきます。
 ①ピンを短絡→ON
 ①ピンを短絡しない→OFF
 ご家「6.1.2 ピンアサイン」(31 ページ)を参照してください。
- 本機側の操作で ON/OFF して信号を取り出す場合は、④ピンと⑧ピンを短絡させないでください。 「6.1.2 ピンアサイン」の説明に従い、必要な出力信号を取り出してください。
- リモート操作移行中に本機側で初期圧登録・ON/OFFの操作・能力レベルを変更することはできません。
- 能力レベルを変更する時にレベルが記憶されるため、万が一主電源を切っても前回の能力レベルを記憶しています。

6.2 通信機能

オプションの通信ボードセット(型式:RS-485 もしくは、RS-EN)を使用する事で、運転 ON/OFF やフィルタ目 詰まり等の情報を取り出す事が可能です。

6.2.1 RS485 通信

設定方法は、「4.2 通信フォーマット設定モード(通信機能装備時)」を参照してください。 *ご* 「4.2 通信フォーマット設定モード(通信機能装備時)」(16 ページ)

6.2.2 イーサネット

詳細については、別途購入されたイーサネットの取扱説明書を参照してください。

第7章 付録

7.1 仕様

	型式	モータ 定格出力	電圧	電流値	周波数	最大 吸込風量	最大 吸込静 圧	騒音値 *1	質量
	CHP-5000AT3-DSA-UD	5000W	200V 三相	27.5A	50/60Hz	10 m [*] /min	18.0kPa	68~ 74 dB	302.0kg
* •	1: 騒音値は吸込み口にホー	スを接続し	、本機から		ιτ Αλ	ケール dB	で測定し	ています	•

7.2 消耗品リスト

品名	型式	数量	交換時期*1		
	CHP-5000AT3-DSA-UD				
1 次フィルタ	CS-200-500-75P-R	4本	メンテナンスは半年に1回		
ブロア冷却用排気フィルタ	AE-100(330×220)	1 枚	6ヵ月		
ゼオライト	ZEO-13000	13kg	1~3ヵ月		

*1: 交換周期はお客様の使用頻度、環境、吸い込み濃度(材質と成分)によって変わります。

7.3 電気回路図

7.3.1 CHP-5000AT3-DSA-UD


■保証と責任の範囲

●保証期間

正常な使用状態で、故障または損傷が生じた場合には、出荷後 12 ヶ月間は無料で修理いたします。 ただし、7.2 消耗品リストに記載の消耗品は除きます。 *⁽) 「7.2 消耗品リスト」(33 ページ)*

下記のような場合は保証期間内でも有償とさせていただきます。

- 本書に記載されている注意事項を順守しなかった場合に発生した故障または損傷の場合
- 本書に記載されている使用環境以外での使用による故障または損傷の場合
- 弊社および弊社指定の販売店以外で修理・改造・分解等をした場合
- 使用中に生じたキズ、汚れなどの外観上の変化の場合
- 消耗品・付属品の交換および弊社指定以外の部品を使用した場合
- お買い上げ後の落下、および運送上の事故による故障または損傷の場合
- 火災、塩害、ガス害、地震、風水害、落雷、電圧異常およびその他の天変地異を原因とする故障または損傷の場合

●修理について

出張修理をご希望の場合、出張料金は、保証期間内外を問わず有料となります。 修理の都合により、修理時に改良部品を使用する場合がございます。

本機の故障による損害、データの抹消による損害、その他本機の使用により生じた損害について、弊社は一切その責任を負いかねますので、ご了承ください。

形 式 製造番号 購入年月日 運転開始日 年 お客様お名前 住所 電話 担当者

■お買い上げメモ

Table of contents

Chapter 1 Product Usage Precautions	39
1.1 Safety Notations	39
1.2 Precautions for Transport, Storage, and Relocation	39
1.3 Precautions for Installation	39
1.4 Precautions for Operation	40
1.5 Other Precautions	40
1.6 Safety Label Locations	41
Chapter 2 Components Identification	42
2.1 Accessories	42
2.2 Device Body	43
2.2.1 CHP-5000AT3-DSA-UD	43
2.3 AI 3 Panel	44
2.4 Display indications	45
2.4.2 Indications during Stoppage	
2.4.3 Indications during Operation	46
Chapter 3 Operation	47
3.1 Start up Propagation	47
3.1.5 Installation	47
3.1.2 Wiring and Piping	49
3.1.3 Safeguards	50
3.2 Operation	51
3.3 Registering Initial Pressures	51
Chapter 4 Configuring Settings (MODE SELECT Mode)	53
4.1 Screen Transitions in MODE SELECT Mode	
4.2 Communication Format Setting Mode (When Equipped with Communication Function)	53
4.3 Air Volume-Down Alert Timing Setting Mode	54
4.4 Other Setting Mode	55
4.4.1 Clock Calibration Mode	55
4.4.2 Accumulated Run Time Reset Mode	55
4.4.3 Selpoint Reset Mode	50
	50
Chapter 5 Maintenance and Checkup	57
5.1 Filter maintenance and replacement	57
5.1.1 Primary filter maintenance and replacement	57
5.1.2 Maintenance and replacement of primary filter (when lifting up each piece one by one).	58
5.1.3 Maintenance of primary litter (when everything is pulled up together)	59
5.1.4 Cleaning the Blower cooling filter	59
5.2 Replacing the Button Battery	00
5.3 Daily Checkup	61
5.3.1 Pulse timer	62
5.4 Errors/Warnings	63
5.4.1 Action on Errors/Warnings	63
5.4.2 Error/Warning Table	64
5.5 Troubleshooting	65
Chapter 6 Useful Utilization (Optional)	66
6.1 Remote Cable	66
6.1.1 Electrical Diagram	66
0. I.Z PIN ASSIGNMENTS	69
	/ U

	6.2 Communication Function	
	6.2.2 Ethernet	
Ch	nanter 7 Annendix	71
	7.1 Specifications	
	7.1 Specifications 7.2 Consumables List	
	7.1 Specifications 7.2 Consumables List 7.3 Electrical Diagram	

Chapter 1 Product Usage Precautions

1.1 Safety Notations

This instruction manual describes usage precautions with the below listed symbols. Be sure to read the instructions.

Symbol	Meaning
WARNING Indicates a hazardous situation which, if not avoided, could result in personal serious injury.	
	Indicates a hazardous situation which, if not avoided, could result personal injury or damage to the device.
\otimes	Indicates a prohibited action (which MUST NOT be done).
	Indicates a mandatory action (which MUST be done).

1.2 Precautions for Transport, Storage, and Relocation

0	 Transportation must be done using at least two people. Injury may result due to fall hazard.
	 Relocation and storage must be done in a safe location within the temperature range of -10°C to 60°C at relative humidity of 80% or less.

1.3 Precautions for Installation

	\Diamond	 Do not install the device in or around an area with flammable, explosive, or corrosive mist, smoke, or gases. 		
	0	 This device is designed for installation in a cleanroom or a clean factory. Avoid installation in other areas, such as outdoors. Ensure a wide suction port. If the device is used continuously with a narrow suction port (i.e., at high pressure), the motor may become hot as it cannot be cooled. 		
CAUTION	•	 Install the device in a horizontal, vibration-free location as it contains rotating equipment. Install the device at normal temperature (ambient temperature 0°C to 40°C, at humidity 80% or less) without dew condensation. High temperature or dew condensation may cause failure of electrical components or electric shock. Beware that suction ambient temperature (temperature around the dust to be collected) is low enough, because otherwise the motor may lead to performance reduction or failure. Provide a sufficient space for the exhaust port (at least 100 mm from the exhaust port). If the exhaust port is blocked, the proper suction power cannot be delivered. Furthermore, sufficient cooling is not provided in the box, causing burnout of the motor or failure of electrical components. The installation site should be at an altitude of 1,000 m or less. 		

1.4 Precautions for Operation

MARNING	0	 Do not suck the following substances: Flammable substances Gasoline, thinner, benzine, kerosene, paints, etc. Explosive dusts Aluminum, magnesium, titanium, zinc, epoxy, etc. Sparky dust Dust containing sparks from high-speed cutting machine, grinder, welding machine, etc. Fire source Cigarette, and liquid such as oil and chemical Others Liquid such as water, oil, chemical Do not use the device in or around an area with flammable, explosive, or corrosive mist, smoke, or gases. Ensure secure connections, without bending or pulling cables with excessive force. Fire or electric shock may result. Ensure that the power supply conforms to the specifications of the device.
		Use the device to suck dry dust without potential dust explosion.Be sure to connect the ground wire.

0	Do not move the device while in operation.
•	 Use the device in locations of pollution degree I. Use a power supply of overvoltage category II. Turn off the main power switch in case of power outage. Injury or device damage can occur when power returns. Ensure that filters are installed correctly. If filters are missing, clogged, or broken, foreign matter may enter the motor, causing failure.

1.5 Other Precautions

	0	 Do not disassemble or alter the device. Failure to observe can cause electric shock or injury. For internal checkup or repair, contact your dealer.
WARNING		 Follow the information in the instruction manual when performing installation, connection, starting, operation, checkup, and fault diagnosis. Working in a wrong manner may lead to fire, electric shock, or injury.
		·
		When discarding the device, dispose of it appropriately as an industrial

1.6 Safety Label Locations



Chapter 2 Components Identification

2.1 Accessories













No.	Name	Function	Qty.
1	Primary filter	Collects adsorbs dust and fumes.	1
2	Valve booster	Rectifies the pulse air in the primary filter.	1
3	Zeolite	Lamination of zeolite to the filter surface reduces the adhesion of dust fumes on the filter surface.	
4	Exhaust filter for cooling blower	Clean the exhaust.	1
5	Filter regulator	Adjusts the pressure of compressed air for dust removal. (Configuration values:0.45~0.55MPa)	1
6	Lifting and lowering tool(wrench)	Tool for jacking up and down the main body. (wrench)	1
7	Start up guide	Please read this when you switch on the power and operate the device.	1

• Power cable is not included.

•Recommended cable: AWG 12 or higher Withstanding voltage 300 V or higher

2.2 Device Body

2.2.1 CHP-5000AT3-DSA-UD







No.	Name	Function
1	Exhaust port	Connects the exhaust duct.
2	AT3 panel (operation panel)	Operates the device.
3	Battery box	Stores the button battery.
4	Remote connector	Connects a remote cable (optional).
5	Pulse chamber	Stores the pulse device.
6	Inspection window	A window to check the state inside the main body.
\bigcirc	Dust tray	Stores accumulated dust and zeolite.
8	Blower cooling filter chamber	Stores the blower cooling filter.
9	Motor chamber	Stores the motor.
10	Relief valve	Relieve the internal pressure.
1	Filter regulator	Adjusts the pressure of compressed air for dust removal. (Setting value:0.45~0.55MPa)
(12)	Suction port	Connects a suction duct.
(13)	Primary filter chamber	Houses the primary filter.
(14)	Power terminal block BOX	Stores the power terminal block.

2.3 AT3 Panel



No.	Name	Function
1	Organic EL (OLED) display	Displays the operating status and various settings. Displays an error or warning number in case of an error or warning.
2	Suction power level lamps	Green lamps indicate a suction power level (1 to 7).
3	Up/Down arrow buttons	During stoppage or operation, switches among the content of the display. □ # "2.4 Display Indications" (page 45) In MODE SELECT mode, cycles through parameters and changes numeric data. □ # "Chapter 4 Configuring Settings (MODE SELECT Mode)" (page 53)
4	ERROR lamp	The red lamp lights upon detection of an error that stops device operation. The red lamp flickers upon detection of an error or warning that continues device operation.
5	Left/Right arrow buttons	During operation, each pressing of the Left (or Right) arrow button changes the suction power to the next lower (or higher) level. During MODE SELECT mode, each pressing of the Left (or Right) arrow button moves the cursor left (or right) to the next position.
6	OFF button	Stops the operation. During stoppage, holding this button down for 3 seconds clears the registered initial pressure.
$\overline{\mathcal{O}}$	ON button	Starts operation.
8	ENTER button	During operation, holding this button down for three seconds causes transition to initial pressure registration. <i>□ □ Chapter 4 Registering Initial Pressures" (page 51)</i> During SELECT MODE, determines the selected parameter and its numeric data. <i>□ □ Chapter 4 Configuring Settings (MODE SELECT Mode)" (page 53)</i>

9	MODE SELECT button	During stoppage, transits to the MODE SELECT mode. C⇒ "Chapter 4 Configuring Settings (MODE SELECT Mode)" (page 53)
		During MODE SELECT mode, returns to the previous mode. During an error/warning, transits to the error history mode or error clear mode.

2.4 Display Indications

2.4.1 About Modes



2.4.2 Indications during Stoppage

The Up/Down arrow buttons cycle through indications.



2.4.3 Indications during Operation

The Up/Down arrow buttons cycle through indications.



Chapter 3 Operation

3.1 Start-up Preparation

3.1.1 Installation

Installation method



Installation location

To ensure operating safety and deliver the full performance of the device, install the device in a location that meets the following conditions:

Item	Description
Ambient temperature	0° to +40°C
Ambient humidity	80 RH% or lower (without dew condensation)
Ambient conditions	Indoors (not exposed to direct sunlight), free of corrosive/flammable gases, oil mist, and dust.

Removing the button battery insulating sheet

While removing the insulation sheet from the button battery, turn on the electricity.

- 1. Before using the device, remove the insulation sheet from the button battery.
- **2.** Pull out the insulating sheet from the battery cover unit.



Installing the filter regulator

Install the filter regulator into the installation position.





Do not allow synthetic oils, organic compounds, chemicals, cutting oils or spray from these to adhere inside the regulator.

3.1.2 Wiring and Piping

Wiring

WARNING	\bigotimes	 Perform wiring firmly, without bending or pulling cables with excessive force. Fire or electric shock may result. Ensure that the power supply conforms to the specifications of the device.
		Be sure to connect the ground wire.
	\oslash	 Avoid multiple connections as they can cause voltage reduction. At reduced voltage, the device may fail to operate normally, resulting in failure.

The device is powered by three-phase supply. The tolerance of the supply voltage is $\pm 10\%$.

1. Remove the power terminal block BOX lid by extracting its screws.



2. Connect the power cable to the power terminal block of the unit.



3. Connect the power supply end of the power cable to the power outlet.

Piping

- **1.** Connect the intake piping (separately prepared) to the inlet flange.
- 2. Connect the $\varphi 8$ air tube to the filter regulator. Recommended air pressure 0.45MPa to 0.55MPa.



3.1.3 Safeguards



If you continue to operate the unit with a clogged filter, the following safeguards are activated. The blower and other functions may be damaged or fail to operate when safeguards are activated.

Immediately inspect the filter and the parts thereof.

■SP (Suction pressure) increase

When the pressure reaches around 16.5 kPa due to filter clogging, etc., the relief valve will be activated. In addition, the current reaches 26.5 A at around 19 kPa. If this condition continues for more than 10 seconds, it cuts out automatically.

Temperature increase

When the motor temperature exceeds 80°C, WARN 1 is displayed on the display. ERR 04 is displayed when the temperature reaches 90°C, and the motor cuts out automatically.

3.2 Operation

- **1.** Turn on the power switch. The display indicates the program version and the ID for RS485 communication.
- **2.** Press the ON button on the AT3 panel. The device starts operation.
- **3.** Check that abnormal noise is not generated and the suction is appropriate
- **4.** Set a desired suction power level by pressing the Left/Right arrow buttons. The suction power is indicated by the suction power level lamps (1 to 7).



IMPORTANT

• Ensure appropriate piping during operation. The piping should be as short as practicable, with the piping port diameter not too small.

3.3 Registering Initial Pressures

Air volume reduction due to filter clogging is judged based on a registered initial differential pressure and indicated as low air volume (WARN4). Register initial pressures through these steps:

- **1.** Perform the wiring and piping of the device.
- 2. Start the device at a desired suction power level.
- **3.** Press and hold down the ENTER button for three seconds. The display shows "Initial DP Get Y", prompting confirmation to register/update initial pressures.
- To proceed with registration/update, press the ENTER button.
 The device starts to acquire initial pressure.
 If you do not want to update, press the MODE SELECT button to return to normal operation.
- 5. The device runs through a sequence of suction power levels 1 to 7, to automatically acquire the differential pressure for each level. While the device is acquiring initial pressure, the display alternates between the "Initial DP Check"
- message and the "suction power level and differential pressure" values.6. When the registration completes, the display shows the "Initial DP Entry" message and the device returns to normal operation.

IMPORTANT	 Ensure that the filters are new when initial pressures are registered. Update registered initial pressures once again if piping is changed or all filters are replaced (except for the exhaust filter).
	 If initial pressures are not registered, an "initial pressure unregistered" warning (WARN6) appears.
	• The registered initial pressures can be cleared by holding down the OFF button for three seconds when the device is in stop state.

• Clearing registered initial pressures

- 1. Hold down the OFF button for three seconds when the device is in stop state. The display shows "Initial DP CIr Y", prompting confirmation to clear registered initial pressures.
- Press the ENTER button to clear them, or press the MODE SELECT button to return to normal operation.

3. When the clearing completes, the display shows the "Initial DP CIr" message and the device returns to the stop state.

Chapter 4 Configuring Settings (MODE SELECT Mode)

4.1 Screen Transitions in MODE SELECT Mode

To move to the MODE SELECT mode, press the MODE SELECT button during stoppage. The Up/Down arrow buttons cycle through parameters.



4.2 Communication Format Setting Mode (When Equipped with Communication Function)

This mode sets the below listed items of serial communication format. The settings are enabled after the power switch is turned off and back on.

Item	Setting	Default
Communication station number	1 to 25	1
Baud rate	9600bps、19200bps、 38400bps、57600bps、 115200bps	9600bps
Bit length and parity	Bit length = 8 bits, with no parity Bit length = 8 bits, odd parity Bit length = 8 bits, even parity Bit length = 9 bits, with no parity	Bit length = 8 bits, with no parity
Stop bit	Stop bit = 1 bit Stop bit = 2 bits	Stop bit = 1 bit

- **1.** Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the communication format setting mode ("Com Setting").
- **3.** Press the ENTER button. The communication station number check screen appears, showing the current settings.
- 4. Press the Up/ Down arrow buttons to move to the item you want to set.
- **5.** Press the ENTER button. The setting screen appears.
- 6. Press the Up/Down arrow buttons to select the desired setting.
- 7. Press the ENTER button to determine the setting.
- 8. To exit this mode, press the MODE SELECT button to return to normal mode.

4.3 Air Volume-Down Alert Timing Setting Mode

This mode allows for changing the timing for displaying an air volume-down warning (WARN4) as desired.

- 1. Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the air volume-down alert timing setting mode ("Volume Down ST").
- Press the ENTER button. The current setting appears. The default is 50%, displayed as "3: Down to 50%".
- **4.** Press the Up/Down arrow buttons to select a timing between 30 to 70%. A lower setting causes the air volume-down alert to occur later, and vice versa.



- 5. Press the ENTER button to determine the setting.
- 6. To exit this mode, press the MODE SELECT button to return to normal mode.

4.4 Other Setting Mode

The parameters listed below can be set.

- Date/time setting
 C 4.4.1 Clock Calibration Mode" (page 55)
- Accumulated run time resetting
 C "4.4.2 Accumulated Run Time Reset Mode" (page 55)

4.4.1 Clock Calibration Mode

- **1.** Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the other setting mode ("Other Setting").
- **3.** Press the ENTER button. The screen displays "Time Adjust".
- Press the ENTER button. The date setting screen appears.
- 5. Press the Up/Down arrow buttons to change the value.
- Press the ENTER button to determine the value. Set the value in this order: year, month, and day.
- **7.** After the date is set, the time setting screen appears.
- Press the Up/Down arrow buttons to change the value.
- Press the ENTER button to determine the value.
 Set the value in this order: hours, minutes, and seconds.
- **10.** To exit this mode, press the MODE SELECT button to return to normal mode.

4.4.2 Accumulated Run Time Reset Mode

This mode resets the accumulated run time ("Runtime").

- **1.** Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the other setting mode ("Other Setting").
- **3.** Press the ENTER button. The screen displays "Time Adjust".
- 4. Press the Up/Down arrow buttons to change the display to "[Runtime Reset]".
- **5.** Press the ENTER button.
- The display shows "Reset Runtime Y", prompting confirmation to reset the accumulated run time. To reset, press the ENTER button.
- 6. To exit this mode, press the MODE SELECT button to return to normal mode.

4.4.3 Setpoint Reset Mode

This mode allows for restoring the defaults for communication format and air volume-down alert timing, and resetting the accumulated run time.

- **1.** Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the other setting mode ("Other Setting").
- **3.** Press the ENTER button. The screen displays "Time Adjust".
- 4. Press the Up/Down arrow buttons to change the display to "[Setting Reset]".
- Press the ENTER button. The display shows "1:YES", prompting confirmation to reset setpoints. To reset, press the ENTER button.
- **6.** The display shows "1:START" for reconfirmation.
- 7. Press the ENTER button to reset the setpoints and move the device to normal mode.

4.5 Error History Mode

The error history allows for checking four occurrences of errors. The error history is cleared by turning off the power switch.

- **1.** Move to the MODE SELECT mode.
- 2. Press the Up/Down arrow buttons to move to the error history mode ("Error Data").
- **3.** Press the ENTER button. The display indicates the number of the most recent error that has occurred and the accumulated run time at that occurrence.
- 4. Press the Down arrow button to display the history of four errors in order from the latest.
- 5. To exit this mode, press the MODE SELECT button to return to normal mode.

Chapter 5 Maintenance and Checkup

	•	 Before starting maintenance and checkup, be sure to break the electrical circuit by turning off the power supply and disconnecting the plug from the power outlet. This task requires two or more people. Be sure to wear protective equipment. If you use a worn or damaged filter, internal electric parts will be damaged. In order to prevent breakdowns and accidents, be sure to perform regular maintenance and inspection.
		 Replace the filter in an area with sufficient space. Also, please ensure you install the filter the correct way round.
	_	
IMPORTAN	т	 Lay a protective sheet outside the clean room before replacing. Depending on the type of dust collected, dust may scatter when replacing. Wear protective goggles and mask during any work.

5.1 Filter maintenance and replacement

If clogging occurs, a "WARN2" warning appears. Replace the primary filter.



Wipe off any foreign particles adhering to the packing parts with a waste cloth or similar, and clean. Possible cause of trouble such as diminished suction power and dust leakage, etc.

5.1.1 Primary filter maintenance and replacement

IMPORTANT

• The primary filter should be replaced in an area large enough to open the suctionside filter case.

1. Remove the two tubes and release the latches. (There are also latches on the other side.)





3. Raise the blower chamber by more than 30 mm.

5. Pull out the primary filter chamber towards you.





When installing the filter after cleaning or replacement, zeolite may leak if it is tightened unevenly or loosely.

Also, if the packing attached to the primary filter has deteriorated due to age, replace it. (Consumables sold separately)

5.1.2 Maintenance and replacement of primary filter (when lifting up each piece one by one)

1. Unscrew and remove the 12 nuts and remove the presser plate holding the handle in place.







5.1.3 Maintenance of primary filter (When everything is pulled up together)

 Pull out the primary filter chamber. When the handle of the filter attachment plate is lifted, you can remove the filter mounting plate and the primary filter sets.

2. Clean the upper section of the seal and the area of the filter mounting plate in contact with the seal.



IMPORTANT Do not let dust accumulate in the dust tray. It may cause clogging of the primary filter. Dispose of dust after use.

 Release two latches only of the dust tray. (There are also latches on the other side.)

- **2.** Attach the wrench and raise the main unit above the dust tray by more than 30mm.
- **3.** Pull out the dust tray and clean it.







5.1.5 Replacing the Blower cooling filter



Avoid installing the filter inside out. The frame of the filter grating should face the exhaust side.

IMPORTANT

The exhaust filter should be replaced in an area with a large free space.

1. Remove the four eyebolts and release the four latches.



- 2. Remove the cover.
- **3.** Loosen the four screws and remove the presser plate.
- 4. Replace the blower cooling filter.





5.2 Replacing the Button Battery



- 1. Turn on the electricity of the device.
- 2. Remove the battery cover by extracting its two screws.



- **3.** Push the claw rightward and remove the button battery.
- 4. Replace with a new button battery.
- **5.** Install the battery cover back in place.
- 6. Cut off the electricity of the device.

5.3 Daily Checkup

Check item	Frequency	Check that:
Filter case	Before operation	Filter case is completely closed.
Suction port	Before operation	Suction port is not blocked.
Exhaust condition	Daily	Exhaust port is not blocked.
Operation panel condition	Daily	Error or warning is not displayed.

5.3.1 Pulse timer

This product is equipped with four solenoid valves.

In order to aid zeolite filter adsorption and to prevent any loss of suction power, it cleans the filters with the pulse air (compressed air) according to the cycle setting.

■Pulse timer operating sequence



5.4 Errors/Warnings

If an error/warning occurs, the self-diagnosis function built-in the device lights (flashes) the ERROR lamp and shows display data and error number alternately on the display.

For a description of errors/warnings displayed, see "5.4.2 *Error/Warning* Table" (page 64).

For faults and conditions not covered by self-diagnosis, see "5.5 Troubleshooting" (page 65).

5.4.1 Action on Errors/Warnings

If the self-diagnosis function of this device has detected an error or warning, take the steps below to clear the error or warning.

The screenshots for illustration are provided as examples.

- If an error/warning occurs, the ERROR lamp lights (flashes) and the display shows display data and error number alternately. If there are two or more error/warning occurrences, the one with the highest priority is displayed.
- Press the MODE SELECT button to move to the error history mode. If there are two or more error/warning occurrences, the number of occurrences precedes the error number.
- **3.** If there are two or more error/warning occurrences, press the Up/Down arrow buttons to check the error numbers.
- Take an action appropriate for the error number shown on the display.
 C "5.4.2 Error/Warning Table" (page 64)
- **5.** Press the MODE SELECT button to move to the error clear mode.
- ERROR CLEAR
- **6.** To clear the error/warning, press the ENTER button to return to normal mode. To leave the error/warning uncleared, press the MODE SELECT button to return to normal mode.

If an error/warning is left uncleared:

- For an error/warning that continues the operation All buttons remain enabled.
- For an error/warning that stops the operation......The ON button is disabled.

To resume the operation, clear the error/warning.

IMPORTANT	• Once WARN6 or WARN7 is cleared, it will not reappear until the power switch is
	turned off and back on.

5.4.2 Error/Warning Table

Priority	Error No.	Error/warning	Description	ERROR lamp	Device operation	Action
	ERR02	INV error detection	Detects abnormal signal from inverter	Lit	Stop	Follow the remedies for ② in "5.5 <i>Troubleshooting</i> " (
High ♠	ERR04	Internal temperature error	Temperature around the blower is too high.	Lit	Stop	Follow the remedies for ② in "5.5 <i>Troubleshooting"</i> (┌͡ᢖPage 65).
	ERR06	Pressure error	Operation continued at low pressure for more than preset period.	Lit	Stop	Follow the remedies for ② in "5.5 <i>Troubleshooting"</i> (<i>⊂͡ᢖ</i> Page 65).
	ERR07	F-RAM write error	Cannot write to F-RAM.	Flashing	Remains operational	Contact CHIKO AIRTEC.
	ERR08	Communication error	BCC judgment mismatch	Flashing	Remains operational	Contact CHIKO AIRTEC.
	WARN1	Internal temperature high	Temperature around the blower is close to the error threshold.	Flashing	Remains operational	Follow the remedies for (2) in "5.5 Troubleshooting" $(\sub{F} Page 65).$
	WARN2	Filter replacement time limit expired	Operation continued at low air volume for more than preset period.	Flashing	Remains operational	Follow the remedies for ③ in "5.5 <i>Troubleshooting"</i> (<i>了 Page</i> 65).
	WARN3	Inadequate pressure (suction)	Suction pressure is low.	Flashing	Remains operational	Follow the remedies for ② in "5.5 <i>Troubleshooting</i> " (<i>⊂͡ᢖ</i> Page 65).
	WARN4	Inadequate air volume	Air volume is reduced by filter clogging.	Flashing	Remains operational	Follow the remedies for ③ in "5.5 <i>Troubleshooting"</i> (┌͡ᢖ Page 65).
	WARN5	Exhaust pressure error	Exhaust pressure is too high.	Flashing	Remains operational	Follow the remedies for ③ or ④ in "5.5 <i>Troubleshooting"</i> (┌͡ᢖ Page 65).
Low	WARN6	Initial pressure unregistered	Initial pressure is not registered yet.	Flashing	Remains operational	Registering Initial Pressures. (<i>⊏͡ᢖ Page 51)</i>
	WARN7	Battery voltage low	Remaining battery level is low.	Flashing	Remains operational	Replacing the Button Battery. (<i>⊂͡ᢖPage 61)</i>

5.5 Troubleshooting

No.	Trouble phenomenon	Cause	Remedy	
1	Organic EL display shows nothing.	Power not turned on	Turn on the power.	
Q		Faulty motor	Call for repair. The motor must be replaced.	
	Motor fails to start or	Stopped due to overload or abnormal	 [1] Check that the exhaust/suction ports are not blocked. The ERROR lamp lights up if completely blocked. [2] Check the rated voltage. [3] Check for motor overheat due to either filter clogging or suction temperature. 	
	suddenly stops running.	temperature	After the checks [1] to [3], take corrective action, and then turn the power off and back on. If the operation cannot resume, the temperature thermostat of the motor may be active. Turn off the main power, and after 30 minutes, resume the operation.	
		Primary filter not in place	Install the primary filter correctly.	
		Latches are unfastened.	Fastens the latches.	
٩	Lower suction force	Clogged filter	Replace filters.	
		Clogged piping or suction port	Check if piping is clogged or the suction port blocked.	
		Faulty motor	Call for repair. The motor must be replaced.	
		Improper filter installation	Reinstall filters. <i>C</i> ᢖ <i>"Page 57"</i>	
4	Untrapped particles	Filter broken or past service life	Replace filters.	
		Clogged filter	Replace filters.	
(5)	Odd noise or vibration	Foreign matter entered in blower.	Call for repair.	
9	irom motor	Broken motor bearing	Call for repair.	

Note: For other phenomena, contact CHIKO AIRTEC.

Chapter 6 Useful Utilization (Optional)

6.1 Remote Cable

6.1.1 Electrical Diagram



Remote operation

Pin ④......When turned on, control switches to the remote mode, enabling remote operation while disabling ordinary operation via the AT3 panel.

Pin ②.....Outputs an analog pressure signal.

Pins (3), (5), and (6)...In case of adding an inductor (e.g., relay), install a noise limiter (approx. 33 Ω + 0.1 μ F), diode, or the like.



State	Point		
Sidle	В	С	
ON	HIGH	LOW	
OFF	LOW	HI-Z	



English





6.1.2 Pin Assignments

Wire color	Pin #	Signal name	Description		
Black	1	Operation input signal ^{*1}		With ④ and ⑧ short-circuited, ① is short- circuited to start operation.	
Red/white	4	Remote operation change signal ^{*1}	Remote signals	 ④ and ⑧ are short-circuited to start remote operation. Once this short circuit is established, ordinary operation via the touch panel is disabled. 	
Yellow	7	Suction power level change ^{*2}	(input)	Voltage (0 to 5 V) can be applied between ⑦ and ⑧ to change suction power levels.	
Yellow/white	8	GND			
Black/white	2	Operating pressure signal ^{*3}		Outputs the current operating pressure. Analog signal: 1 to 5 V; impedance $\geq 4.7~k\Omega$	
Red	3	Filter clogging output signal ^{*4}	Output signals	Outputs a clogging signal. Open collector output: NPN	
Green	5	Operation output signal ^{*3}		Outputs an operation signal (ON lamp). Open collector output: NPN	
Green/white	6	Abnormality signal detection * ³		Anomalous signal Detection Open collector output: NPN	

[Filter clogging signal] : When WARN2, WARN4 or WARN5 occurred

[Abnormality signal] : When any ERR occurred

*1: Contact input (non-voltage contact)

*2: Analog input (0 to 5 V)

Do not apply more than +5.0 V.

[Threshold table for voltage applied to pin O]

Suction power level	Voltage (Vdc)	6	
1	0.6 to 1.1	5	
2	1.2 to 1.7	Voltage 4	
3	1.8 to 2.3	(Vdc) 3	
4	2.4 to 2.9	2	
5	3.0 to 3.5		
6	3.6 to 4.1		
7	4.2 to 5.0	1 2 3 4 5 6 7 Suction power level	,

Allow for an error of $\pm 4\%$ when setting voltage. Specifically, apply the midpoint of the voltage range for each level.

*3: Open collector output

The maximum absolute rating is 50 V for voltage and 100 mA for current. **The recommended value is half or less of the rating.**

6.1.3 Remote Operation

- For on/off switching via remote operation, short-circuit pins ④ and ⑧.
 Pin ① is short-circuited → ON
 Pin ① is not short-circuited → OFF
 CF "6.1.2 Pin Assignments" (page 69).
- Do not short-circuit between pins ④ and ⑧ when taking signals by on/off switching on the device side.

Take out desired output signals as per the description in "6.1.2 Pin Assignments" (page 69).

- Initial pressure registration, ON/OFF operation and suction power levels cannot be operated or changed on the device side during transition to remote operation.
- The current suction power level is stored in memory. This means that the previously effective level is stored even if main power is turned off.

6.2 Communication Function

By using optional communication board set (model: RS-485 or RS-EN), you can retrieve information such as operation "ON/OFF" and filter clogging.

6.2.1 RS485 Communication

See "Communication Format Setting Mode (When Equipped with Communication Function)" for instructions on configuring communication settings.

"4.2 Communication Format Setting Mode (When Equipped with Communication Function)" (page 53)

6.2.2 Ethernet

For details, refer to the instruction manual of the Ethernet device you purchased separately.
Chapter 7 Appendix

7.1 Specifications

Model	Motor rated output	Voltage	Current value	Frequency	Max. suction volume	Max. suction static pressure	Noise value* ¹	Mass
CHP-5000AT3-DSA-UD	5000W	200V Three- phase	27.5A	50/60Hz	10 m [*] /min	18.0kPa	68~ 74 dB	302.0kg

*1: Noise value is measured with a hose connected to the suction port, at a distance of 1 m from the device, on the A scale dB.

7.2 Consumables List

Part name	Model	Quantity	Replacement intervals ^{∗1}			
CHP-5000AT3-DSA-UD						
Primary filter	CS-200-500-75P-R	4	Maintenance once in six months			
Exhaust filter for cooling blower	AE-100(330×220)	1	6 months			
Zeolite	ZEO-13000	13kg	1 to 3 months			

*1: The replacement intervals vary with the use frequency, environment, and suction concentration (substance and composition) at the customer's site.

7.3 Electrical Diagram

7.3.1 CHP-5000AT3-DSA-UD



Scope of Warranty and Responsibility

Warranty period

We will repair free of charge any failures or damages that may occur during normal operating conditions within 12 months of shipment.

However, this does not apply to the consumables listed in "7.2 Consumables List".

∠ "7.2 Consumables List" (page 71)

The following cases will be handled as a charged service even within the warranty period.

- Failure or damage caused by violation of the instructions in this document.
- Failure or damage due to use in an operating environment other than that described in this document.
- Repair, alteration, disassembly, or similar action done any party other than CHIKO AIRTEC or a CHIKO AIRTEC-designated sales agent.
- Blemish, contamination, or other appearance change that may occur during use.
- Replacement of any consumable or accessory, or use of any part not designated by CHIKO AIRTEC.
- Failure of damage due to falling after purchase or accident during transport.
- Failure or damage due to natural disasters, such as: fire, salt damage, gaseous damage, earthquake, wind and flood damage, lightning strike, and abnormal voltage.

• Repairs

Travel expenses for on-site service will be chargeable whether within or outside the warranty period. For repair reasons, improved parts may be used for repair.

CHIKO AIRTEC will not be liable for any damage resulting from use of this device, such as damage caused by failure of the device or by erasion of data.

Memo about purchase

Model		Serial No.
Date of purchase		Operation start date:
Your name		
Address	Phone Person in charge	

チコーエアーテック株式会社

CHIKO AIRTEC CO.,LTD. 〒562-0012 大阪府箕面市白島 2-27-24 2-27-24,Hakushima, Minoh, Osaka 562-0012, Japan TEL (81) 072-720-5151 FAX (81) 072-720-5133 URL http://chiko-airtec.jp/