6.4 ボタン電池の交換

注意


- 本機で使用しているボタン電池のケースは、CR2477サイズ用です。CR2477以外のボタン電池は使用しないでください。
- 電池交換は、本体を通電した状態で行ってください。
- 通電しない状態で交換した場合、日付はリセットされます。

重 要	電池の交換は、1次フィルター室を開くことができる十分なスペースがある場所で行ってください。


ボタン電池が切れると「WARN7」の警告が表示されます。
ボタン電池を交換してください。

- ボタン電池:　CR2477
- 電池寿命:　約2年

1. 主電源スイッチをONにします。




2. パッチン錠を解除し、吸気側フィルター室を開きます。
3. 衝突板、1次フィルター、2次フィルター、3次フィルターを取り外します。
4. 電池カバーのねじ（2か所）を緩め、電池カバーを取り外します。

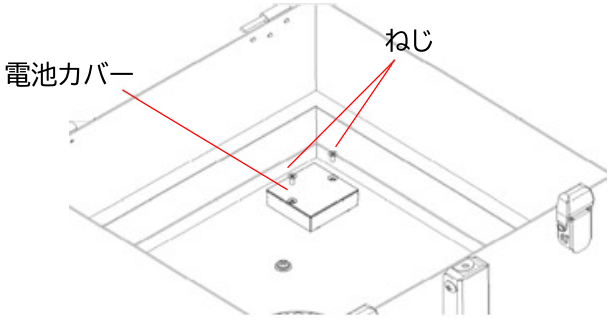

5. 電池ボックスの爪を外側に押し、ボタン電池を取り外します。
6. 新しいボタン電池を取り付けます。

注記

本体を通電せずに電池を交換すると、著しく電池が消耗することがあります。

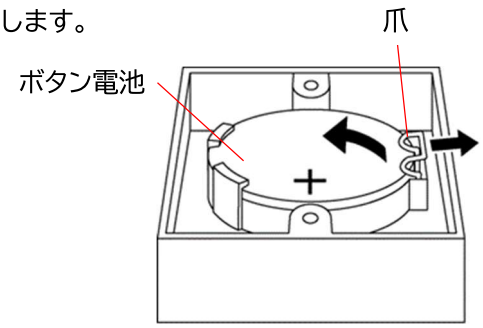

7. 電池カバーを取り付け、ねじで固定します。
8. 3次フィルター、2次フィルター、1次フィルター、衝突板を取り付けます。
9. 吸気側フィルター室を閉じ、パッチン錠で固定します。
10. 「**5.1.2**」を参照し、電池残量が100%になっていることを確認してください。

6.4 Replacing the Button Battery


CAUTION

- The button battery case is designed for CR2477 size. Do not use any button battery other than CR2477.
- Make sure that the machine is powered on when replacing the battery.
- Replacing the battery without powering on the machine will cause the date to be reset.


Important	Replace the battery in a location with enough space to open the primary filter chamber.

When the button battery runs out, the “WARN7” warning appears.
Replace the button battery.

- Button battery: CR2477
- Battery life: About 2 years




1. Turn on the main power switch.
2. Release the snap locks and open the intake filter chamber.
3. Remove the impact plate, primary filter, secondary filter, and tertiary filter.
4. Loosen the two screws on the battery cover and remove it.

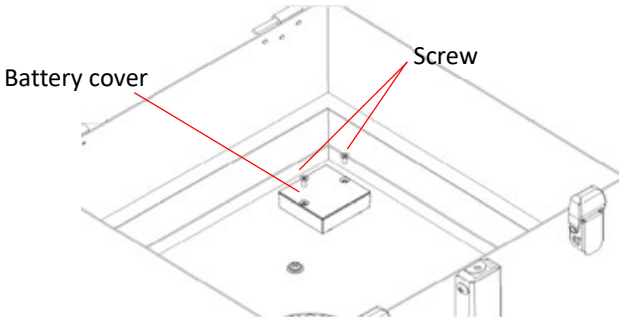

5. Push the catch on the battery compartment outward, and remove the button battery.
6. Install a new button battery.

NOTE

Replacing the battery without powering on the machine can significantly drain the battery.

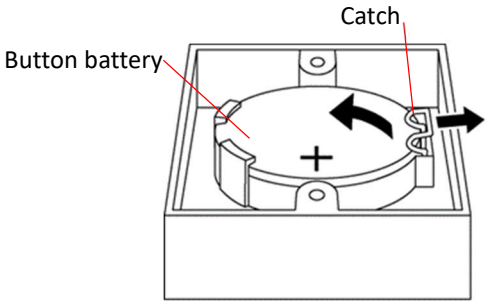

7. Install the battery cover and secure it with screws.
8. Install the tertiary filter, secondary filter, primary filter, and impact plate.
9. Close the intake filter chamber and lock it with the snap locks.
10. By referring to “**5.1.2**”, make sure that the battery level is 100%.